
Correct Guy Lock Installation

April 2014

Tail may be secured with cable tie for tidiness (not featured)

Minimum 200mm tail

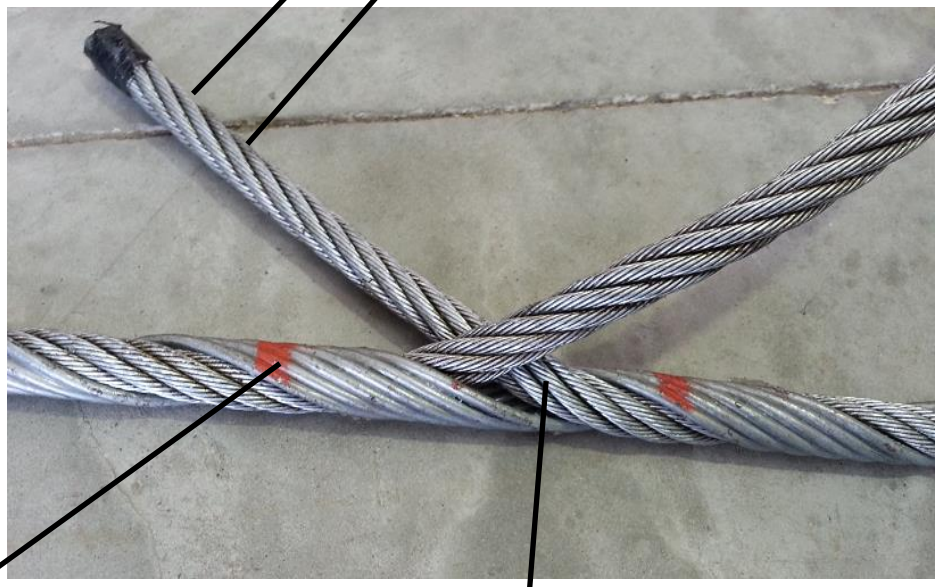

To ground anchorage

Loop around Pole

Tail exit between painted marks

IMPORTANT: Tail exit is trapped under loop

To achieve full ultimate holding strength of the guy wire, the correctly sized guy lock must be installed with a 200mm tail that exits through the loop and between the painted marks on the guy lock.

When tension is applied, the loop will clamp down on the tail to achieve the ultimate tensile strength of the guy wire without slipping. This method of installation is the ONLY way to guarantee zero slip of the preformed fitting.

TransNet Your Partners in Power